



INSTALLATION, OPERATION, AND PROGRAMMING THE RRP REMOTE CONTROL UNIT (Part Number RCU07)

INSTALLATION:

Mount the wireless actuator box in the desired location. You are now ready to connect the main power. The (RED) wire with the quick-blow fuse (+POS) should be connected to a positive circuit that is only on when the ignition key is in the "on" position.

The other (BLACK) wire (-NEG) can be grounded on the frame, the body, or you can run a wire directly from the negative post on the battery.

The male plugs will plug into the female harnesses that run to the cutouts. The harness can be routed through any number of existing holes in the firewall or under the carpet and out through the rubber plugs in the floorboard if there are any, and then connected to the cutout or cutouts depending on your application.

If you have any problems with the installation, you can contact us at:

techsupport@racereadyperformance.com

*******IMPORTANT*******

The control module is NOT waterproof and electronics ARE NOT covered under the RRP Limited Warranty.

PROGRAMMING

Your remote control transmitters that come with your wireless remote system should come pre-programmed. If you need to reprogram for any reason, follow these simple instructions:

1. Press the programming button on the side of the control box twice until the LED is lit.
2. Press button 1 on each transmitter that you want to program.

OPERATION

To operate your RRP Electric Exhaust Cutout with the wireless remote, simply click the button once to open the cutout, click again to close. If you want to control the sound level you can click during the opening process and it will stop.